


Package contents

Name: **MUFFINS PC986/ WOOD 07**
Suspension Lamp

Components included with unit: 1x ceiling canopy bracket, 1x wooden ceiling canopy, 3x hex screw (M5x16), 2x hex screw (M4x12), 1x hex key size 2.5, 1x hex key size 2, 1x steel suspension cable with safety stop and tubular mount, 3x wire connector terminal, 1x glass shade, 1x wooden body, 3x silicone rings, 1x plastic cable stop, 1 pair cotton gloves, 1x installation manual

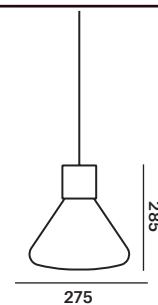

Assembly

Installation must be carried out by a qualified electrical technician only.
Switch off power at main circuit panel prior to installation!
The manufacturer assumes no liability for damage resulting from incorrect installation.

- 1. Installing the ceiling canopy bracket and tubular suspension cable mount**
 - Choose sufficiently strong ceiling anchors (not included) and secure the ceiling canopy bracket and the tubular cable mount to the ceiling. With regard for various types and conditions of ceiling materials, we recommend consulting an expert prior to installation. The manufacturer assumes no liability for incorrect installation or defects in the material to which the ceiling canopy bracket and tubular cable mount are to be secured.
- 2. Assembling the light**
 - Insert the glass shade into the wooden lamp body so that the logo sticker is situated in the cable cutout. Ensure that the holes in the wooden lamp body are aligned with the holes in the glass shade.
 - Ensure that the holes in the wooden lamp body are aligned with the holes in the glass shade.
 - Thread the provided hex screws into the holes in the wooden lamp body and turn them until they are recessed. This will securely fix the glass shade to the wooden lamp body. The hex screws should turn easily without any significant resistance.
- 3. Installing the light**
 - Have an assistant hold the assembled light (wooden body + glass shade).
 - Being careful not to fray the end of the steel suspension cable, thread the silicone rings onto it. The rings will serve to create a wave effect in the power cord by affixing it to the cable. Pass the suspension cable through the first part of the tubular mount – the cable safety stop (Fig. *3A). Unscrew the second part of the tubular mount (Fig. *3B) and pass the cable through it. Secure the cable by pressing parts *3A and *3B together. Next, pass the cable through the hole in the side of the tubular mount (Fig. *3C). - Once the light is installed, cut the cable so that it partially protrudes from the hole. Never cut the cable prior to installation.
 - Following these steps will ensure the steel suspension cable is properly secured and able to safely support the full weight of the light.
- 4. Connecting the light to the building wiring**
 - Pass the power cord through the silicone rings on the steel suspension cable and then through the - wooden ceiling canopy and secure the canopy from below with the plastic fixing ring. Connect the light to the building wiring, including the ground wire attached to the ceiling canopy bracket. Use the two M4x12 hex screws to secure the ceiling canopy to the bracket. Restore power at the main circuit panel and check the functionality of the light.

Removing the glass shade and disassembling the light (2 persons)

To remove the glass shade, follow the steps for installation in reverse order. The light can now be disassembled (e.g., on a table).

Prior to shipping, the functionality of each lamp and its components is thoroughly tested.
The manufacturer assumes no liability for the mishandling of products.

In order to eliminate potential danger in the case of damage to the outer flexible power cable of the light, it must be replaced only by the manufacturer, one of the manufacturer's service technicians, or a similarly qualified person.

Installation time: 0.5 hr (2 persons)


TECHNICAL SUPPORT
info@brokis.cz
www.brokis.cz

OFFICE
Španielova 1315/25, Praha Řepy, 16300, Czech Republic
ID 64940799, VAT CZ64940799


SHOWROOM AND FACTORY
Sídliště Janštejn 39, Horní Dubenky, 588 52,
Czech Republic




1.

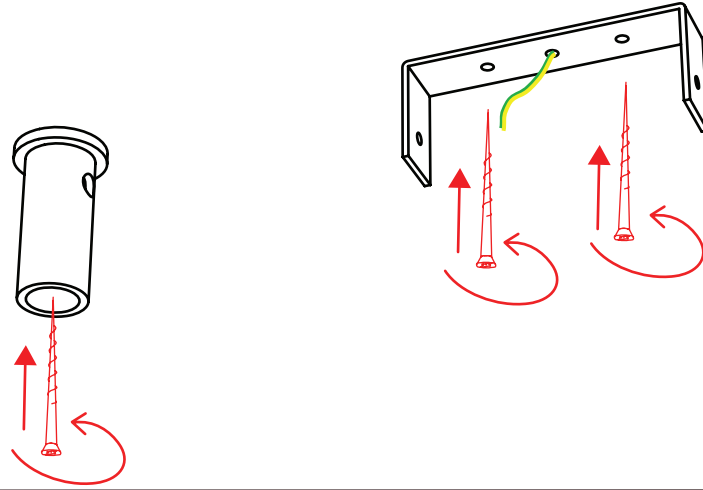


2.

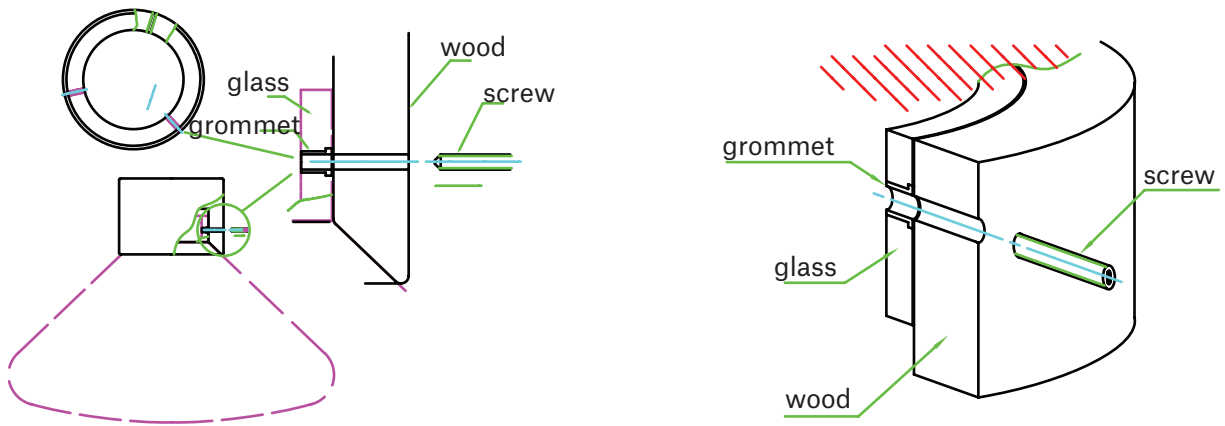

3.

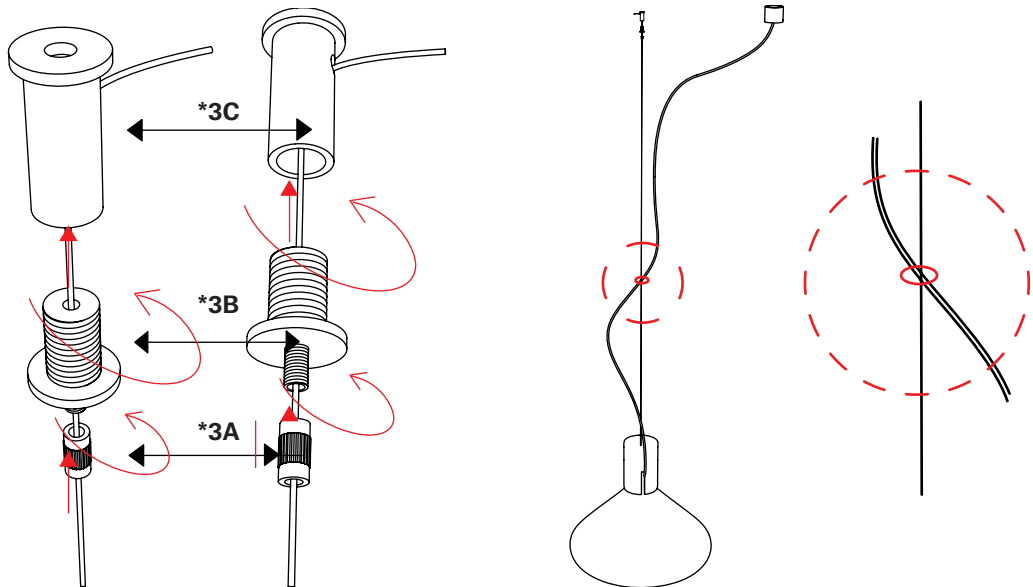

1.

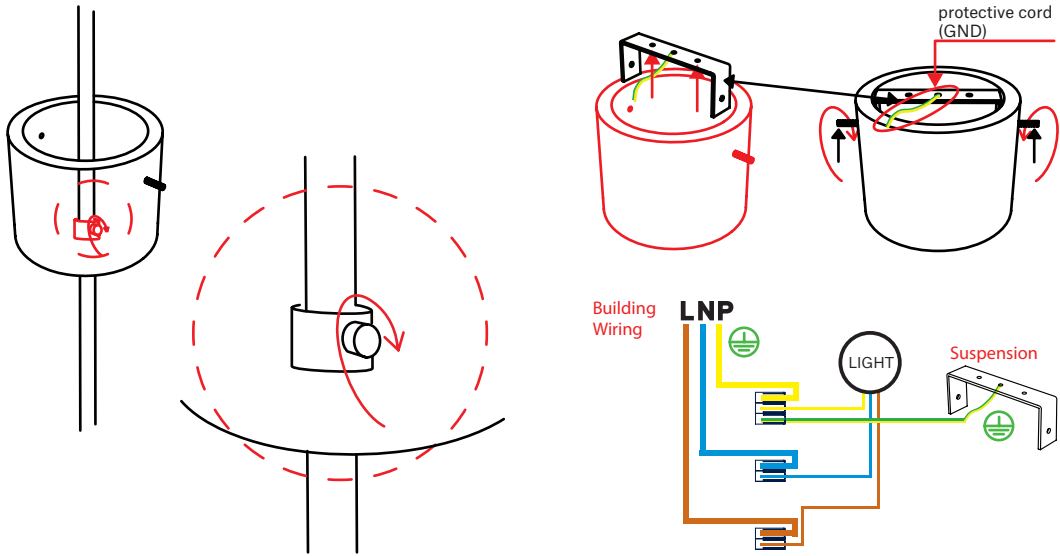

TECHNICAL SUPPORT
info@brokis.cz
www.brokis.cz

OFFICE
Španielova 1315/25, Praha Řepy, 16300, Czech Republic
ID 64940799, VAT CZ64940799


SHOWROOM AND FACTORY
Sídliště Janštejn 39, Horní Dubenky, 588 52,
Czech Republic



Obsah balení

Název: MUFFINS PC986/ WOOD 07
závěsné svítidlo

Komponenty keré jsou součástí balení: stropní držák s baldachýnem, 3x imbusový šroub (M5x25), 2x imbusový šroub (M4x12), imbusový klíč vel.2.5, imbusový klíč vel.2, 1x stop lanko s nosnou trubičkou, 3x přípojovací svorkovnice, skleněné stínidlo, dřevěná montura, 3x silikonový kroužek, 1x plastová zarážka kabelu, bavlněné rukavice, instalační manuál

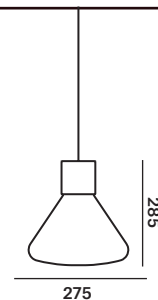

Instalační manuál

Před montáží vypněte přívod elektrického proudu!
Montáž smí provádět pouze pracovník s odbornou elektrotechnickou kvalifikací.
Při nedodržení montážního návodu výrobce neručí za případné vzniklé škody.

- 1. Instalace stropního držáku baldachýnu a nosné trubičky stop lanka**
 - Zvolte dostatečně silné kotevní prvky (není součástí balení) a přišroubujte ke stropu držák stropního baldachýnu a nosnou trubičku stop lanka.
 - S ohledem na různý typ i stáří materiálů stropů doporučujeme montáž konzultovat s odborníkem. Výrobce svítidla neodpovídá za nevhodně zvolený pracovní postup či vady materiálu, do kterého se nosný komponent instaluje.
- 2. Kompletace svítidla**

Instalujte světelný zdroj.

 - Do dřevěné montury vložte skleněný korpus stínidla tak, aby samolepka s logem byla umístěná ve výřezu pro kabel. Ujistěte se, že otvory v dřevěné montuře jsou souběžné s otvory ve skle.
 - Do otvoru v dřevěné montuře zašroubujte imbusový šroub tak, aby nevyčníval z dřevěné části svítidla. Tímto postupem dosáhnete úplného zajištění skla v dřevěné montuře. Průchodnost šroubu by měla být plynulá, bez nepřirozeného odporu.
- 3. Instalace svítidla**
 - Zkompletované svítidlo (dřevěný díl + sklo) si nechte přidržet spolupracující osobou.
 - Navlečte na ocelové lanko silikonové kroužky (slouží ke zvlnění kabelu na lanku) a prostrčte jej nejprve první částí nosné trubičky - tzv. pojistkou pro zadrhnutí (obr. *3A).
 - Odšroubujte druhou část nosného válečku (obr. *3B) a navlečte ji na neroztřepené lanko. Stlačením dílů *3A a *3B zabezpečíte lanko proti vysunutí. Následně provlečte lanko postranním otvorem nosné trubičky (obr. *3C). Po instalaci zastříhnete lanko tak, aby z postranního otvoru částečně vyčnívalo.
 - Lanko nikdy nezastříhávejte před instalací. Dodržením tohoto postupu zajistíte bezpečné ukotvení lanka, jež nese celé svítidlo.
- 4. Elektro instalace svítidla**
 - Elektrický kabel protáhněte silikonovými kroužky na ocelovém lanku, následně dřevěným baldachýnem a zafixujte jej zajišťovacím plastovým očkem. Zřídte elektrické propojení svítidla s elektroinstalací, a to včetně ochranného vodiče, umístěného na držáku baldachýnu. Pomocí dvou imbusových šroubků a imbusového klíče přišroubujte baldachýn k stropnímu držáku.
 - Zapněte příslušný jistič a ověřte funkčnost svítidla.

Demontáž skla včetně celkové deinstalace svítidla (2 osoby)

Pro demontáž svítidla postupujete v opačném sledu výše popsaným postupem pro jeho instalaci. Nyní můžete svítidlo demontovat v kontrolovaných podmínkách - např. na stole.

U každého svítidla včetně jeho komponentů je před expedicí důkladně zkontrolována jeho funkčnost. Výrobce nenes odpovědnost za nesprávné zacházení s produkty.

Je-li vnější ohebný kabel tohoto svítidla poškozen, musí jej pro zabránění nebezpečí nahradit výhradně výrobce nebo jeho servisní technik, nebo osoba se stejnou kvalifikací.

Doba instalace: 0.5 H (2 osoby)


TECHNICAL SUPPORT
info@brokis.cz
www.brokis.cz

OFFICE
Španielova 1315/25, Praha Řepy, 16300, Czech Republic
IČO 64940799, DIČO CZ64940799


SHOWROOM AND FACTORY
Sídliště Janštejn 39, Horní Dubenky, 588 52,
Czech Republic




1.

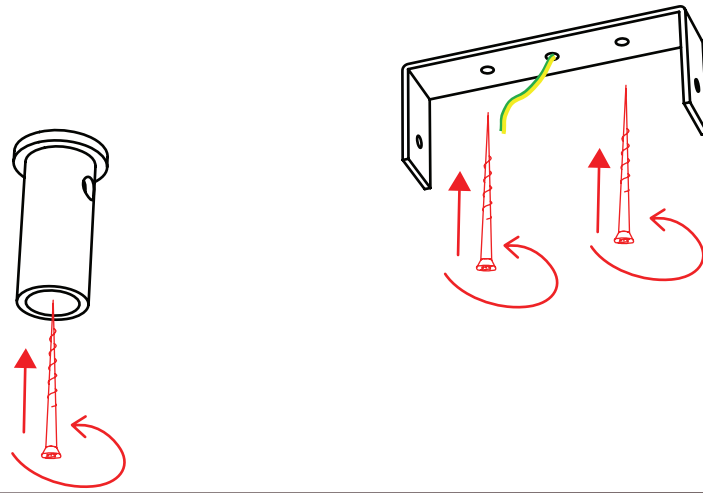

2.

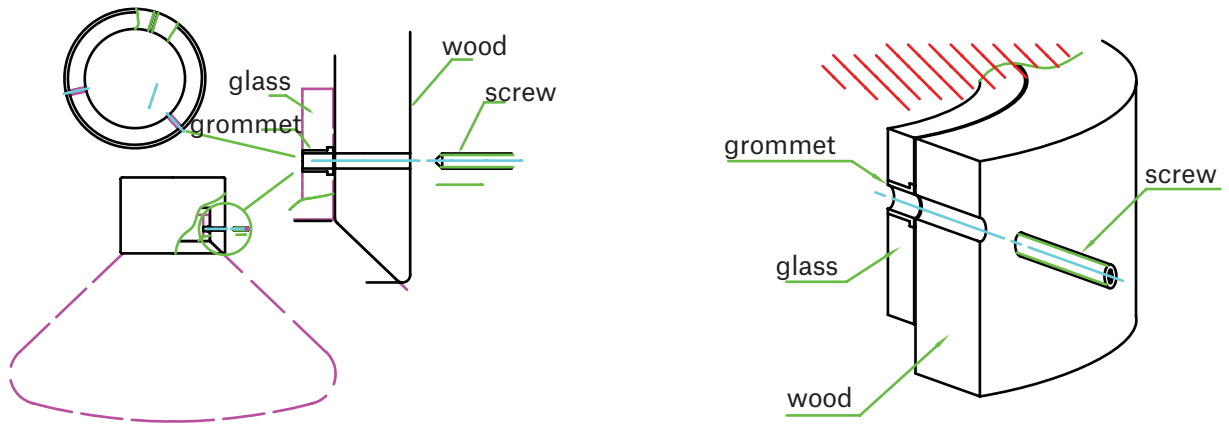

3.

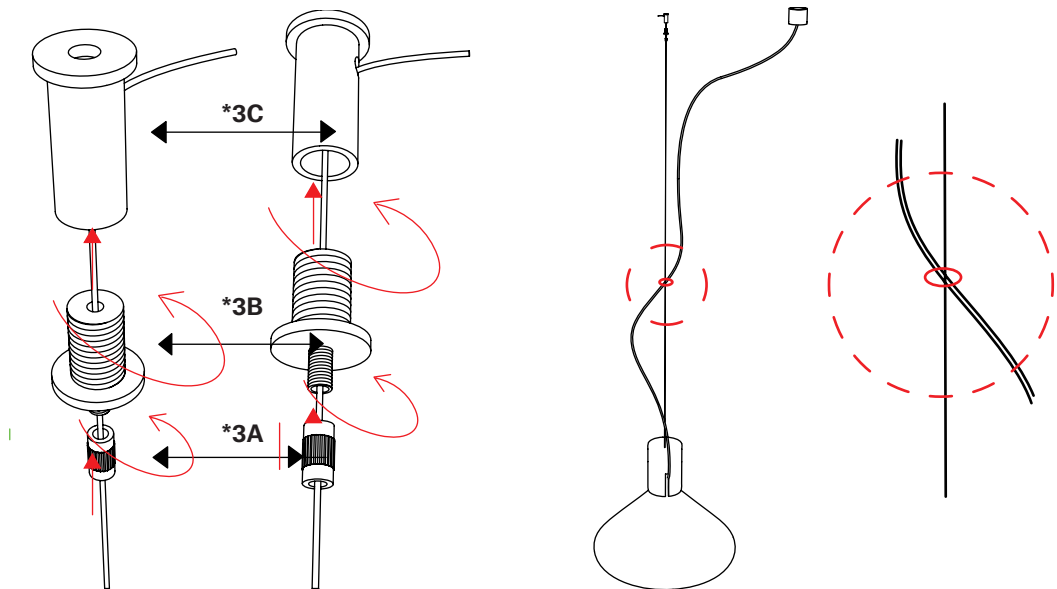


TECHNICAL SUPPORT
info@brokis.cz
www.brokis.cz

OFFICE
Španielova 1315/25, Praha Řepy, 16300, Czech Republic
ID 64940799, VAT CZ64940799

SHOWROOM AND FACTORY
Sídliště Janštejn 39, Horní Dubenky, 588 52,
Czech Republic



1.

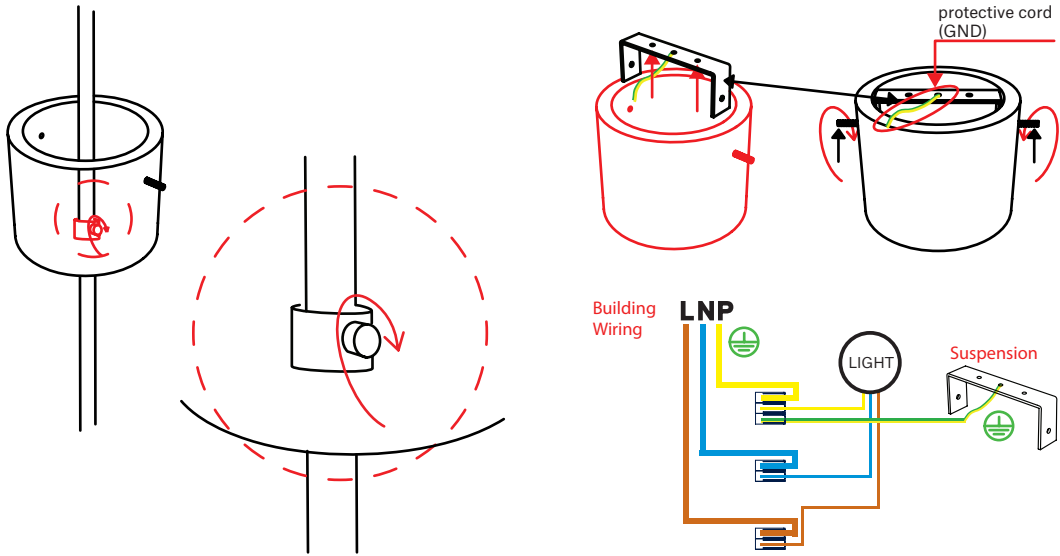

TECHNICAL SUPPORT
info@brokis.cz
www.brokis.cz

OFFICE
Španielova 1315/25, Praha Řepy, 16300, Czech Republic
ID 64940799, VATx CZ64940799

SHOWROOM AND FACTORY
Sídliště Janštejn 39, Horní Dubenky, 588 52,
Czech Republic

